

# SIEMENS

## Quick Reference Guide

**Optiset E Standard, Advance,  
Advance Plus, and  
Advance Conference**  
for Hicom 300 E CS

Creating a World of Highly Integrated  
Communications & Solutions

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to the equipment that are not expressly approved by the responsible party for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## **November 1998**

Form No. GU30-1604-01    Part No. 06D8631    EC No. A93070

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, electronic, photocopying, recording, or otherwise, without prior written permission of Siemens Business Communication Systems, Inc.

Request Siemens publications from your Siemens representative or the Siemens branch serving you. Publications are *not* stocked at the address below.

Siemens Business Communication Systems, Inc.  
4900 Old Ironsides Drive  
P.O. Box 58075  
Santa Clara, CA 95052-8075  
(408) 492-2000

PhoneMail is a registered trademark and OptiGuide is a trademark of Siemens Business Communication Systems, Inc.

Siemens, Hicom, and Optiset are registered trademarks of Siemens Aktiengesellschaft.

Copyright Siemens Business Communication Systems, Inc. 1998.  
All rights reserved.


# Contents

|   |    |
|---|----|
| Contents  | i  |
| Welcome to Your Optiset E Standard, Advance, Advance Plus,<br>or Advance Conference Telephone | 1  |
| Optiset E Standard Telephone  | 2  |
| Optiset E Advance, Advance Plus, and Advance Conference<br>Telephones                         | 3  |
| Bay Option Modules  | 4  |
| Optiset E Key Module  | 10 |
| Optiset E Local Power Supply  | 10 |
| Where to Go for Assistance  | 11 |
| Your Class of Service   | 11 |
| Line Keys   | 11 |
| Status Lights   | 12 |
| The OptiGuide Display   | 12 |
| Feature Keys and Access Codes   | 17 |
| Volume Keys   | 17 |
| Sounds  | 17 |
| Changing Your Audio Settings  | 19 |
| Callback Request  | 20 |
| Conference  | 21 |
| Connect   | 22 |
| Consultation  | 23 |
| Forwarding  | 24 |
| Hold  | 26 |
| Last Number Redial  | 27 |
| Mailbox   | 28 |
| Park  | 29 |
| Pickup  | 30 |
| Pick A Call and Add to Conference   | 31 |
| Preview   | 32 |
| Repertory Dialing (Repdial) Keys  | 33 |
| Saved Number Redial   | 34 |
| Speaker   | 35 |
| Speakerphone  | 35 |
| Station Speed Dialing   | 36 |
| System Speed Dialing  | 38 |
| Transfer  | 39 |
| Feature Access Codes  | 40 |



# Welcome to Your Optiset E Standard, Advance, Advance Plus, or Advance Conference Telephone

The Optiset® E Standard, Advance, Advance Plus, and Advance Conference digital telephones work with your company's Siemens® Hicom® 300 E Communications Server to give you advanced, easy-to-use telephone features. The communications server is your facility's internal telecommunications system.

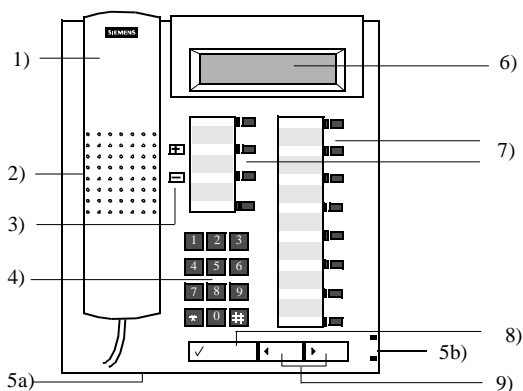 


**Figure 1. Optiset E Standard, Advance, Advance Plus, and Advance Conference Telephones**

- 1) Handset
- 2) Speaker (ringing tone/open listening)
- 3) Keys for telephone settings
- 4) Key pad
- 5a) Microphone for handsfree talking  
(for Optiset E Standard, Advance, and Advance Plus)
- 5b) Microphone for handsfree talking  
(for Optiset E Advance Conference)
- 6) Display with 2 lines, 24 characters each
- 7) Feature keys with status lights
- 8) Guidance key "Select" (confirms function)
- 9) Guidance keys "Scroll Forward" and  
"Scroll Back" for browsing

# Optiset E Standard Telephone

The Optiset E Standard telephone has a microphone for a two-way speakerphone and does not support user-installable option modules.

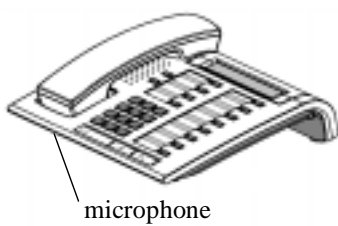 

***Figure 2. Optiset E Standard Telephone***

# Optiset E Advance, Advance Plus, and Advance Conference Telephones


The Optiset E Advance, Advance Plus, and Advance Conference telephones have two bays, underneath their bases, that support the following user-installable option modules:

- Optiset E Analog Adapter
- Optiset E Control Adapter
- Optiset E Speech Adapter (for Advance Conference telephone only)
- Optiset E Data Adapter
- Optiset E Headset Adapter
- Optiset E Headset Plus Adapter
- Optiset E ISDN Adapter
- Optiset E Phone Adapter


These phones also support up to four, side-mounted Optiset E Key Module options, for a total of 64 additional feature keys and up to 29 line extensions. The Optiset E Advance Plus telephone also has a microphone for a two-way speakerphone. The Optiset E Advance Conference telephone has a microphone for a full duplex speakerphone.



***Figure 3. Optiset E Advance Telephone***

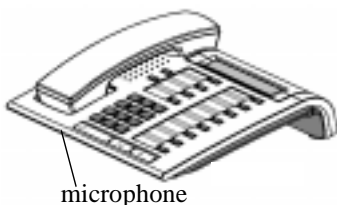 

***Figure 4. Optiset E Advance Plus Telephone***

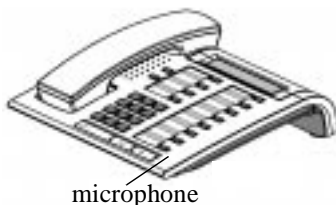 

***Figure 5. Optiset E Advance Conference Telephone***

## **Bay Option Modules**

The bay option modules snap into place in the bays underneath the Advance, Advance Plus, and Advance Conference phones. They are the same size and shape, but labels clearly identify their type.



***Figure 6. Bay Option Modules***

### ***Optiset E Analog Adapter***

The Analog Adapter lets you attach a standard analog device, such as a phone, facsimile machine, modem, or answering machine, to your phone via an RJ11 connector on the back of the adapter. The attached device is configured at your communications server to be completely independent, with its own phone number. The Analog Adapter can be attached to a standard telephone cable up to 300 ft. long. This adapter requires the Optiset E Local Power Supply for operation. (See “Optiset E Local Power Supply” on page 10.)

### ***Optiset E Control Adapter***

The Optiset E Control Adapter lets you connect an Optiset E phone to a computer via a 9-pin EIA-232-E connection. This option module provides a full Telephony Application Programming Interface (TAPI) compliant Computer Telephony Interface (CTI) application and simple AT command set dialing interface. ComManager™, for example, is a TAPI-compliant application that works with the Control Adapter.



The Optiset E Control Adapter supports baud rates up to 19,200 bps for CTI applications. The option module does not support asynchronous data calls or data communications parameters such as hardware flow control (RTS/CTS). It does, however, support AT commands for voice call control.

The Optiset E Control Adapter option module also has a connector for an electret-style headset.

The RJ8 (4-pin) headset interface supports any electret-style headset or carbon-style headset with a configurable power amplifier module. The RJ8 connector also supports all of the features associated with other Optiset E Headset Option modules, such as the ACD Auto Answer Mode.

### ***Optiset E Speech Adapter***

The Optiset E Advance Conference telephone supports the Optiset E Speech Adapter option. The Speech Adapter is a voice recognition module that gives you the ability to replace keyboard entries with spoken commands using any of the existing voice inputs of the phone to which it is attached.

The Speech Adapter allows you to control the attached phone locally by voice commands through the handset, headset, or microphone for hands-free mode. Feedback to the user is given through display messages, voice prompts, and tone signals. A mix of key strokes and voice commands is possible, making the Speech Adapter option very helpful in work places which require real hands-free phone operation.

### ***Optiset E Data Adapter***

The Data Adapter lets you connect your phone to a computer or terminal via a 25-pin EIA-232-E connection. You can make asynchronous data calls by issuing AT commands from your attached PC or terminal to your phone, much as you would to an attached modem. This adapter supports baud rates up to 38.4 kilobytes per second (autobaud detection), simultaneous voice and data communication, hardware flow control (RTS/CTS) and full duplex operation. It also supports the Siemens Application Programming Interface (API), data loopback for customer service tests, and V.120 and DMI mode 2-Bit Rate Adaptation.

### ***Optiset E Headset Adapter***

The Headset Adapter lets you plug one or two electret microphone-type headsets into your phone. You can then make and answer calls using a headset instead of the handset or the phone's built-in microphone and speaker. This type of headset

does not require an amplifier. Connections are made through two RJ8 connectors. Only the Optiset E Advance, Advance Plus, and Advance Conference telephones support this option. When a headset is plugged into the option, the speakerphone in these telephones is disabled.

### ***Optiset E Headset Plus Adapter***

The Optiset E Headset Plus Adapter lets you plug one or two carbon microphone-type headsets and a recorder into your phone. This type of headset requires an amplifier. You can then make and answer calls using a headset instead of the handset or the phone's built-in microphone and speaker. You can also record your conversations. The recorder works without a headset being attached.

The headsets attach to two RJ8 connectors. The recorder attaches to an RJ11 connector. When a headset is plugged into the option, the speakerphone in these telephones is disabled. This adapter does not have a two-prong PJ327 adapter interface. Only the Optiset E Advance, Advance Plus, and Advance Conference telephones support this option.

### ***Optiset E ISDN Adapter***

The ISDN Adapter lets you connect ISDN S0 bus devices such as phones, PC cards, LAN Bridges, G4 fax machines, and video equipment to your phone via an RJ45 connector. It supports up to 64 kilobytes per second simultaneously on each bearer channel. It will only work properly in a primary phone, not in a phone attached to another phone with the Phone Adapter. You can only connect two ISDN devices to the adapter.

### ***Optiset E Phone Adapter***

The Phone Adapter lets you attach another Optiset E phone to your Basic phone. It provides an RJ11 connector to which you can attach the second phone via a standard telephone cable up to 300 feet long. You can then place the second phone in an area not wired for a phone. The attached phone is configured at your communications server to be a completely independent phone with its own phone number.


## ***Optiset E Teleworking Adapter***

The Optiset E Teleworking Adapter (OTA) is a component of the Teleworking Application that enables an Optiset E display telephone to be used by a remote teleworker or telecommuter. Once the option module is installed, the Optiset E telephone will work with all of the Hicom 300 E CS features available to the telephone when connected directly to the communications server.

With the OTA, a teleworker can replicate the configuration of his or her office with regard to the PC and telephone equipment. The OTA option requires a PC running the OTA Service Software, a local power supply, and any one of the Optiset E display phones. The adapter is a standard bay option module that can be installed underneath the base of the phone, however, it can operate without being plugged into a telephone.

**Note:** Refer to the *Teleworking Client Installation and Guide* (G281-0518-00) for more information regarding this application.

Only the Optiset E Standard, Advance, Advance Plus, and Advance Conference telephones support this option.

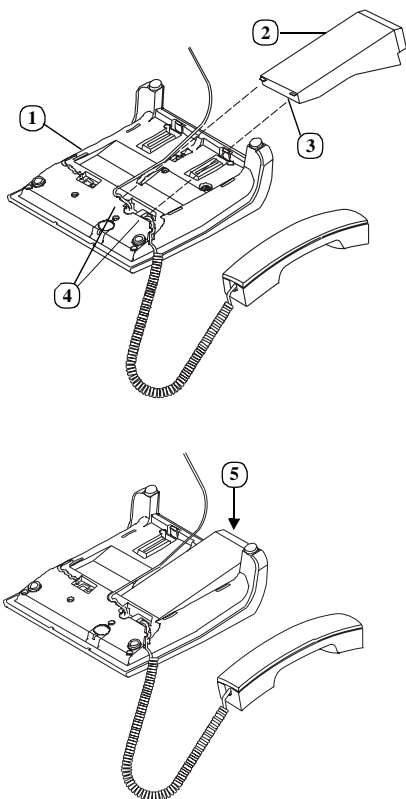 

**Figure 7. Installation of Bay Option Modules**

1. Disconnect the phone line from the wall jack or phone and place the phone ① on a soft surface with the keypad facing down.
2. Hold the adapter ② with the male connector strip facing down and mount it in one of the two mounting locations on the bottom of the phone, sliding the two tabs ③ into the two slots ④.
3. Gently press down on the adapter until the male connector strip is inserted all the way into the female connector strip ⑤.

For the **Analog Adapter**, connect an analog device to the 6-pin RJ11 port on the back of the Analog Adapter (connecting tip/ring to pins 3 and 4). Reconnect the phone line to the phone. Note that the analog adapter requires the Optiset E Local Power Supply for operation.

For the **Control Adapter**, connect the personal computer to the 9-pin (RS-232) connector on the back of the Control Adapter.

Connect the electret-style headset to the RJ8 connector on the adapter. Reconnect the phone line to the phone.

For the **Speech Adapter**, connect the electret-style headset to the RJ8 connector on the adapter. Reconnect the phone line to the phone.

For the **Data Adapter**, connect the data terminal equipment to the 25-pin (EIA232) connector on the back of the Data Adapter. Reconnect the phone line to the phone.

For the **Headset Adapter**, connect the headset(s) to the headset (RJ8) connector(s) on the adapter. Reconnect the phone line to the phone.

For the **Headset Plus Adapter**, connect the headset(s) to the headset (RJ8) connector(s) on the adapter. Connect the recorder to the recorder (RJ11) connector. Reconnect the phone line to the phone.


For the **ISDN Adapter**, connect the ISDN terminal to the RJ45 adapter. Reconnect the phone line to the phone.

For the **Phone adapter**, connect the secondary Optiset E phone into the RJ11 connector on the adapter. Reconnect the phone line to the phone.

For the **Teleworking adapter**, connect the DB-9 data cable between the OTA and the COM port of the PC. Connect the custom cable to the  $U_{p0/E}$  from the OTA to the local power supply. Connect the line cord from the local power supply (Digital) to the line cord connector on the Optiset E display telephone. Connect the line cord from the analog interface of the OTA to the analog interface associated with the PC.

# Optiset E Key Module

The side-mounted Optiset E Key Module adds 16 keys for features and line extensions. Up to four Optiset E Key Modules can be linked together on one phone, for a total of 64 additional feature keys and up to 29 line extensions. Only the Optiset E Advance and Advance Plus telephones support this option. Wall mount kits do not support phones with an Optiset E Key Module attached.

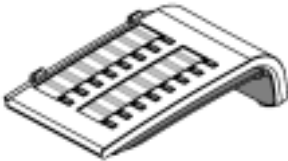 



**Figure 8. Optiset E Key Module**

## Optiset E Local Power Supply

 
The Local Power Supply is required for the Analog Adapter. It may also be required in other situations, depending on the Optiset E telephone's configuration, the type of phone cable used, the length of the phone cable from the communications server, and the type of communications server used. Only one Optiset E Local Power Supply can be used at a time on an Optiset E phone. However, one Local Power Supply can be used on a primary phone and a second Local Power Supply can be used on a secondary phone attached to the primary phone through a Phone Adapter.

### *Installation of Local Power Supply*

To install a local power supply:

1. Disconnect the phone line from the wall jack and from the phone. New phones should have a line cord attached to the phone, but may not be plugged into the wall jack. Plug the line cord (PN 51A4871) ① that comes with the power supply into the jack on the phone and into the jack on the power supply labeled  .
2. Plug one end ② of the line cord that you disconnected from the phone into the jack on the power supply labeled  .

3. Plug the other end ③ of this line cord into the wall jack. Note that you could plug it into an Optiset E Phone Adapter installed in another properly installed phone instead.
4. Plug the power supply ④ into a properly grounded 120 VAC electrical outlet

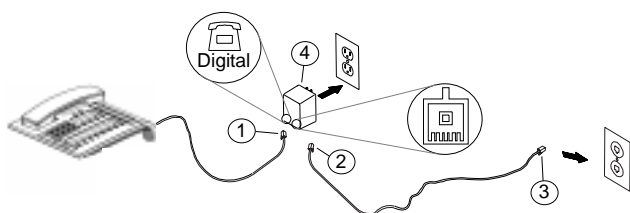

## Where to Go for Assistance

Although every company has its own way of handling support for Optiset E telephones, most have a person responsible for making configuration changes and answering questions about the telephone system. This person, the system administrator, can provide you with information on the features you need to use and can help troubleshoot problems with your phone when necessary. For more detailed information about your phone's features and operation, refer to the *Optiset E Entry, Basic, Standard, Advance, Advance Plus, Advance Conference, and Liberator Administrator Guide for Hicom 300 E CS* (GU30-1602-01).

## Your Class of Service

Each phone in your Siemens telephone system has a class of service (COS) that specifies the features available to it. Therefore, you may find that some features included in this guide are not available on your telephone. Ask your system administrator which features have been assigned to your telephone.

## Line Keys

Your Optiset E telephone has a separate line key for every extension that appears on your phone. You use the line keys to answer and place calls.

# Status Lights

The red status lights next to the line keys tell you what is happening on those lines. A line key status light may turn on steadily, blink, or flash at different rates to signal the status of that line.

Table 1. Line Key Status Light Flash Rates

| Flash Rate           | Line Status |
|----------------------|-------------|
| Off                  | Available   |
| On steady            | In use      |
| Blinking             | Ringing     |
| Flashing (faster)    | On hold     |
| Flickering (fastest) | Forwarded   |

## The OptiGuide Display


The OptiGuide™ display provides information to help you use your phone. The top line, generally in all capital letters, shows the time and date and call-related information like the extension calling you.

The second line, in initial capital letters, indicates some of the features available to your phone in its current state and provides prompts on how to use them. For example, when you are on a call, the prompt *Start transfer?* appears, to let you transfer the call if you want. When the > symbol appears at the right of the display, more features are available for your phone’s current state. The second line also presents call-related information. You can configure your phone to display this line automatically or manually. (See *Configure display?* on page 16.)


 
You can also use the OptiGuide display to show features you have activated, scroll through messages sent to your phone, and change the audio settings on your phone.

### Guidance Keys

The three large keys at the bottom of the phone are used to scroll through prompts and select features.



- The  key (Scroll Forward) is used to scroll to the next option.





- The  key (Scroll Back) is used to scroll to the previous option.
- The  key (Select) is used to select or start the displayed feature or function.

After you have selected a feature, new prompts appear which help you complete the feature's operation.

## **Main Menu**

To go to the main menu, press the Menu key. If your phone is idle, you can also press  or . (This manual assumes that a Menu key has been set up for the user's phone at the communications server.

Then use  or  to scroll to any of the following prompts, which vary in some cases, depending on whether your phone is idle or active (when you have a dial tone or are on a call):

- *Speed dial features?*
- *More features?*
- *View active features?*
- *Program/Service?* (only available from the idle state)
- *Audio settings?* (only available from the idle state)
- *Exit?*

**Speed dial features?** provides access to the following features:

- *Last number redial?* - to redial the last number you dialed.
- *Station speed dial?* - to set up single digit codes to dial frequently used dialing sequences.
- *Saved number redial?* - to redial a number you have saved.
- *System speed dial?* - to use codes set up at your communications server to dial frequently used dialing sequences. You may have two system speed dial lists.
- *Previous Menu?* - to return to the Main Menu.

**More features?** provides access to prompts not available for activation through other prompts. If your phone is idle, the following prompts appear:

- *Call forwarding?* - to forward calls to another extension or outside number.
- *Do not disturb?* - to block incoming calls.
- *Previous Menu* - to return to the Main Menu.

If your phone is active, a different set of prompts appears:

- *Enter account code?* - to enter a code to charge an external call to an account.
- *Time and date?* - to display the time and date, when your phone is active.
- *Open listen/speaker?* - to use your handset and let someone nearby listen to the conversation over the speaker at the same time (on a phone with a speakerphone).
- *Private hold?* - to place a call in a temporary waiting position from which it can be retrieved only from your phone.
- *Line in-use?* - to determine which extension line you are currently using.
- *Mark bad line?* - to report a bad connection with an external call, so that it is logged at the communications server.
- *Previous Menu?* - to return to the Main Menu.

**View active features?** lets you view the features you have activated on your phone and lets you deactivate them. From it, you can scroll through submenus that show the state of the following features:

- *FWD-ALL-BOTH?* - to forward both internal and external calls under all conditions.
- *Do Not Disturb?* - to block incoming calls.
- *Hunt Group?* - to show whether you are actively part of a hunt group that automatically moves a call to the first available member extension.
- *Speaker Call Rejection?* - to block incoming speaker calls.
- *Call Waiting Terminate?* - to immediately alert you with a tone when a caller is trying to reach you with Busy Standby Queuing.
- *Callback?* - to show whether you have a callback request pending to help you reach another extension.

**Program/Service?** This is only available from the idle state and can be reached by pressing the Program key. The Program/Service menu gives you access to the following submenus:

- *Change destinations?* - to create or change destinations for the following features:
  - *Call Forwarding?* - to forward calls to another extension or outside number.
  - *Repdials?* - to set up keys for one-touch dialing.

- Station Speed Dial? - to assign frequently used dialing sequences to codes for easy dialing.
- Saved Number Redial? - to redial a number you have saved.
- Direct Station Select (DSS)? - to monitor and automatically dial or answer an extension.
- *Feature settings?* - to display and activate or deactivate the following features:
  - Call Forwarding? - to forward calls to another extension or outside number.
  - Do Not Disturb? - to block incoming calls.
  - Stop Hunt? - to use the No-Hunt feature to remove your phone from a Hunt group. A Hunt group is a group of phones that move an incoming call from one member's phone to another until it is answered or the caller hangs up.
  - Speaker Call Rejection? - to block incoming speaker calls.
  - Call Waiting Terminate? - to immediately alert you with a tone when a caller is trying to reach you with Busy Standby Queuing.
  - View Callbacks Sent? - to show whether you have sent a callback request to help you reach another extension.
- *Mailbox?* - to scroll through the PhoneMail and reminder messages that have been left on your phone and view the author, date, and time of the message. (You can also press the Mailbox key, if one appears on your phone, to reach the *Mailbox?* prompt.) It takes you to the following submenus:
  - All messages?
  - PhoneMail messages?
  - Reminder messages?
- *View feature keys?* - to display the feature keys configured on your phone. It prompts you to press the key whose function you wish to display.
- *Audio settings?* - to adjust the following audio settings for your phone:

- Ring volume? - to change the ring volume.
- Ring tone? - to change the ring tone.
- Alert tone volume? - to change the volume of the alert tone.
- Speakerphone mode? - to remove echoing from your speakerphone.
- *Configure display?* - to configure your phone for automatic or manual presentation of features prompts on the second display line when you are on a call. If you choose manual, push the right or left arrow keys to display prompts.
- *Phone test?* - to test the followings aspects of your phone:
  - LED? - to light all LEDs simultaneously.
  - Display? - to activate all pixels in the display.
  - Key? - to sound as each key is activated and show key code for function keys.
  - Audio tests? - to sound ring volume, ring tone, and alert tone.
  - Asset ID? - to display the phone's asset ID number.
  - Firmware version? - to display the phone's firmware version.
  - Power level? - to show whether a Local Power Supply is needed for your phone.
  - Exit? - to return to the time and date screen.

You can press the Program key, if one appears on your phone, to reach the Program/Service? prompt.

Also notice the service code numbers in the lower left of the subprompts available through the Program/Service prompts.

|   |   |
|---|---|
| PROGRAM/SERVICE<br>1-Change destinations? | > |
|---|---|



 

From the Program/Service prompt, you can dial these numbers to go directly to these submenus. Similarly, the subsections within the submenus have numerals that you can dial to go to those subsections.




**Audio Settings?** (also available from the Program/Service menu) lets you adjust the following audio settings for your phone: ring volume, ring tone, alert tone volume, and speakerphone mode.

## Feature Keys and Access Codes

You can also press feature keys to gain access to Siemens telephone system features such as Hold, Transfer, Mailbox, and Program. Since your phone has already been assigned a set of feature keys, it may not have some of the feature keys described here. However, you may still use any feature available on your system and permitted by your class of service by dialing its feature access code, if it has one. This guide explains the basic steps for using many features, including the default feature access codes. Your system administrator may have configured both the acronyms for feature keys and the access codes differently from how they appear here.

## Volume Keys

 Use the Volume Up  and Volume Down  keys to adjust the voice volume of your telephone. While on a call, press  to raise the volume of the voice you are hearing, or press  to lower it. Press either key until you reach the desired voice level. Holding down either key only changes the volume one step.

When you hang up or switch to another call, the voice volume returns to the default level. Or you can store the new setting to override the default setting before hanging up, by pressing the  (Select) key or by pressing the  and  keys together, before you hang up.

## Sounds

Your phone makes different sounds to let you know what's going on. Rings occur on a line that you are not using to indicate that you have an incoming call. Tones occur while you are using your phone and provide information about calls and features.

Table 2. Rings



 


 
 

| Sound             | Meaning                    |
|-------------------|----------------------------|
| Single (repeated) | Internal or Emergency call |
| Double (repeated) | External call              |
| Triple (repeated) | Callback                   |

*Table 3. Tones*

| <b>Sound</b>                        | <b>Meaning</b>                                |
|-------------------------------------|---|
| Busy tone                           | The party you called is on the phone.         |
| Dial tone                           | You can make a call or invoke a feature.      |
| Fast busy tone                      | Invalid call                                  |
| Short tone every 20 secs.           | Internal call waiting                         |
| 3 short tones (confirmation tone)   | A feature has been successfully activated.    |
| 3 short tones followed by dial tone | Additional input, such as a PIN, is required. |
| 2 short tones every 20 secs.        | External call waiting                         |
| Wavering (error) tone               | Invalid feature request                       |

# Changing Your Audio Settings

To change the audio settings on your phone:

1. From the Program/Service menu or the Main menu in the idle state, select *Audio settings?*.
2. Press the  key to go to the audio setting you want to change. Press the  key if you want to go back to a previous audio setting.
3. Press the  key. Your phone will display the current setting for the audio setting you have selected. It will also make the sound of the current setting for ring volume, ring tone, and alert tone.
4. If you want to exit without making changes, hang up or press #.
5. To adjust the setting higher or lower, press the  or  keys. For ring volume, ring tone, and alert tone, your phone will make the sound of the adjustment.
6. If you want to exit without making changes, hang up or press #.
7. To save the adjustment you have made, press the  key. Or press the  and  keys together.

# Callback Request

Callback Request helps you complete calls to extensions that are busy, ringing, or in Do Not Disturb mode. It lets you hang up and have the communications server call you back with a triple ring notification. When you answer, the communications server automatically dials the number.

## *To request a callback,*

1. Listen for the phone to ring or for the busy signal.
2. Select *Callback?* on your OptiGuide display.

Or press the Callback (CALLBCK) key, or dial # 1.

3. Hang up.
4. When the communications server calls back with triple rings, answer. The communications server will then dial the extension.



# Conference

The Conference feature lets you have up to eight parties, including yourself, in a telephone conversation. The other parties besides yourself can be on trunks (outside lines).

## ***To set up a conference,***

1. During a call, scroll through the prompts on your OptiGuide display and select *Start conference?*.

Or press the Transfer (TRANSFR) key.

2. Dial the extension you want to add, or dial 9 and the outside number.
3. After the party answers, select *Conference?* from your OptiGuide display to join all the parties.

Or press the Conference (CONF) key (or TRANSFR).

## ***To reconnect to the conference when a called party isn't joining,***

Scroll through the prompts on your OptiGuide display and select *Release and return?*.

Or press the Connect key.

## ***To drop the last added party,***

Scroll through the prompts on your OptiGuide display and select *Remove last party?*.

Or press the Clear key, or press TRANSFR and dial \* \* \* 4. Then press the Conference (CONF) key (or the Connect key or TRANSFR) to rejoin the conference.

# Connect

Connect lets you

- reconnect with a call placed on consultation hold
- reconnect with a transferred call before the transfer is complete
- alternate between two parties, when you have one of them on consultation hold

## ***To reconnect with a call,***

Scroll through the prompts on your OptiGuide display and select *Toggle/Connect?*

Or press the Connect key.

# Consultation

Consultation lets you put the other party in a call on consultation hold, so that you can call and talk privately with a second party. You can then use the Connect feature to alternate between the two parties.

## ***To consult with a second party during a call,***

1. Scroll through the prompts on your OptiGuide display and select *Consult?*.

Or press the Transfer (TRANSFR) key.

2. Dial the second party's extension or 9 and the outside number.
3. Talk with the second party.

## ***To reconnect with the first party,***

Scroll through the prompts on your OptiGuide display and select *Toggle/Connect?*.

Or press the Connect key.

You can continue to use the Connect feature to alternate between the two parties.

## ***To release a party on consultation hold,***

While connected with the party, scroll through the prompts on your OptiGuide display and select *Release and return?*.

Or press the Clear key.

The party will be released, and you will be connected to the other party.

# Forwarding

Forwarding redirects your incoming calls to another extension or an outside number. Variable Forwarding lets you set up an extension or outside number for forwarding under conditions you specify. Fixed Forwarding sends calls to extensions set up for you at the communications server.

## ***To use Variable Forwarding for all calls under all conditions,***

1. When your phone is idle, press the Menu key.
2. Scroll to *More features?* and select it.
3. Scroll to *Call forwarding?* and select it.  
*FWD-ALL-BOTH - - - OFF* is displayed.
4. Dial the number where you want your calls forwarded.

OR

Get a dial tone. Press the Forward key or dial # 91. Dial the extension, or 9 and the outside number, where you want your calls forwarded. Hang up.

## ***To cancel Variable Forwarding,***

1. When your phone is idle, press the Menu key.
2. Use the OptiGuide display to scroll to *More features?* and select it.
3. Select *Call forwarding?*.  
*FWD-ALL-BOTH - - - ON* is displayed.
4. Scroll to *Deactivate?* and select it.

OR

Press the Forward key, or get a dial tone and dial # # 9 1, and then hang up.

***To cancel Fixed Forwarding,***

Get a dial tone and dial # # 9 0.

***To restore Fixed Forwarding,***

Get a dial tone and dial # 9 0.

# Hold

The Hold feature lets you hang up a line without disconnecting the other party. If you do not retrieve the call after a certain period of time (determined by the communications server), your phone will ring. If it is an external call and you do not answer, the call is transferred to the operator.

If you want to make another call after placing a call on hold, you must use another line. If your telephone has only one line, press the Transfer (TRANSFR) key, instead of the Hold key, to place the call on consultation hold, then dial the second party.

## ***To put a call on hold,***

Use the OptiGuide display to scroll to *Hold?* and select it.

Or press the Hold key.

## ***To reconnect,***

Press the line key next to the flashing status light, or pick up the handset and press the line key.

# Last Number Redial

Last Number Redial lets you quickly redial the last number you have dialed. Each time you dial a valid internal or external telephone number it is automatically stored so that you can redial it later. Numbers dialed during consultation calls and transfers are also stored. Only one number is stored at a time, and once you dial a new number it replaces the number stored previously.

## ***To redial the last number dialed,***

1. When your phone is idle, press the Menu key.
2. Select *Speed dial features?*.
3. Select *Last number redial?*.

OR

Press the Last Number Redial (LNR) key.

OR

Get a dial tone and dial # # 4.

# Mailbox

This feature lets you receive and answer PhoneMail® messages and reminder messages left on your phone by internal callers. Messages turn on the status light beside your Mailbox key and (on display phones) provide information about the call. If you have a PhoneMail key, PhoneMail messages turn on the status light beside it instead. The Mailbox key also lets you leave reminder messages at other internal extensions.

## ***To display messages,***

1. When your phone is idle, press the Menu key.
2. Scroll to *Program/Service?* and select it.
3. Scroll to *Mailbox?* and select it.
4. Select *All messages?* or *Phonemail messages?* or *Reminder messages?*.  
The caller's extension and the date and time of the call will be displayed.
5. To display any additional messages, scroll to *Next entry?* and select it.
6. To delete a displayed message, scroll to *Delete?* and select it.

## ***To answer a displayed message,***

Scroll to *Call originator?* and select it.

The communications server calls back the party or system that left the message. (It can call a voicemail system or another number configured at the communications server.) When the party or system answers, the message is deleted.

## ***To leave a reminder message,***

When you make a call and receive a busy tone or no answer, scroll to *Reminder message?* and select it.

The other party's Mailbox status light turns on. If the other party has a display phone, the system will also leave a reminder message providing your name and the date and time of your call.



# Park

Park lets you move a call to an extension and hold it there without ringing that extension. You or another party can then retrieve the call from the extension as needed.

## ***To park a call to another extension,***

1. Scroll to *Park call?* and select it.
2. Dial the extension where you want to park the call.
3. Hang up.

OR

Press the Transfer (TRANSFR) key. Dial \* 6. Dial the extension where you want to park the call. Hang up.

## ***To retrieve a parked call,***

If the extension is on your phone, press the line key next to the flashing status light.

If the extension is on another phone,

1. Press the Pickup key.

Or get a dial tone and dial \* 3.

2. Dial the extension where the call is parked.

# Pickup

Pickup features let you answer calls ringing, on hold, queued, or parked at other extensions.

Group Pickup lets you answer a call to an extension in your pickup group (set up at the communications server) even when you do not know the number for the extension.

Station Pickup lets you answer a call at any extension, provided that you know the number for the extension.

## *To answer a call in your pickup group,*

Press the Pickup key twice. Or get a dial tone and dial \* \* 3.

## *To answer a call ringing, on hold, queued, or parked at any extension,*

1. Press the Pickup key, or get a dial tone and dial \* 3.
2. Dial the extension.

# Pick A Call and Add to Conference

You can use the Pickup feature to pick up the following kinds of calls and add them to a conference call.

- a call alerting or ringing on another extension, on your phone or other phones
- a call on hold on another line, on your phone or another phone
- a call parked on another extension
- a call on busy standby queuing for another extension
- a call on busy standby queuing for the line that you are using

## *To pick a call and add it to a conference,*

1. Press the Pickup key during a two-party call or a conference call. Or get a dial tone and dial \* 3.

The other call is placed on consultation hold.

2. Dial the extension where the call to be picked up is located.

If the call you are picking up is on busy standby queuing for your line, you will already be connected to it now. You do not have to dial an extension for it.

3. After the picked up party answers, press the Conference (CONF) key to join all the parties.

All parties will hear a conference tone to signal that another party has joined the call.

If the picked up party does not want to join the conference, press the Clear key. This disconnects the picked up party and returns you to the original call.

To go back and forth (toggle) between the picked up party and the original call, press the Connect key.

**Note:** You can also transfer, place on hold, place on consultation hold, or park a call you have picked up. (See “Transfer” on page 39, “Hold” on page 26, “Connect” on page 22, and “Park” on page 29.)

To screen an incoming call before picking it up, put the conference on hold and answer the call. Then return to the conference, pick up the call, and add it to the conference.

# Preview

The Preview feature lets you view information associated with any line configured on your phone. You can see the following information when the phone is idle or active on a call:

- the identity of the caller on a line configured to ring on your phone (including recalling lines from hold, park, system hold, and transfer.)
- the identity of the caller for the line you are currently using.
- the identity of a party or a camped-on party on your currently active line.
- the information about a line on hold.

## ***To activate the Preview feature,***

1. Press the Preview key. The Preview status light turns on.
2. Press a line key to view information.

Line information is displayed for 8 seconds. If you take no further action, the display reverts to the previous content. The Preview key remains active so that you can continue to display information about other lines.

## ***To deactivate the Preview feature,***

You can do one of the following:

- Press the Preview key. The status light turns off.
- Press any key except the following dial pad keys: Mute, Volume, Time, 0 through 9, \*, or #.
- Make a call using the speakerphone.
- Place the handset on-hook if it is off-hook.
- Place the handset off-hook if it is on-hook.

## ***To answer a call on a Preview line,***


If your phone is idle, go off-hook and begin speaking while the preview information is displayed.

If you are active on a call, turn the Preview key off before answering the call.

# Repertory Dialing (Repdial) Keys

This feature lets you set up each repdial (R-) key on your faceplate for one-touch dialing of an extension, outside number, feature access code, or combination of numbers and feature access codes.

## ***To set up a repdial key,***

1. When your phone is idle, press the Menu key.
2. Scroll to *Program/Service?* and select it.
3. Select *Change destinations?*.
4. Scroll to *Repdial?* and select it.
5. Press the key you want to set up as a repdial.
6. Enter the dialing sequence you wish to assign to this repdial key.  
  
You can press  to add multiple time delays (the default is 2 seconds for each) to the sequence.
7. Select *Save?*.
8. If you want to set up another repdial key, scroll to *Next entry?* and select it.
9. To end set up, select *SAVED - Exit?*.

OR

Press the Program key. Press the repdial (R-) key that you want to use. Enter the dialing sequence you want to assign to the key. Press the Program key. On your faceplate, label the key with the name of the feature or person that it dials.

## ***To dial using a repdial key,***

Press the repdial key.

# Saved Number Redial

This feature saves a number that you have dialed. Later, you can redial your saved number.

***To save a number you have dialed, while you are still connected with that number,***

Select *Save number?* from your OptiGuide display.

Or press the Saved Number Redial (SAV/RDL) key.

Or dial # 4 while the call is still ringing or busy.

***To dial your saved number,***

1. Press the Menu key.
2. Select *Speed dial features?*.
3. Scroll to *Saved number redial?* and select it.

OR

Press the Saved Number Redial (SAV/RDL) key, or get a dial tone and dial # 4.

## Speaker

The Optiset E Advance telephone has a speaker underneath the handset that you can use for receiving calls or listening to the PhoneMail system. Since the speaker is one-way, you must pick up your handset to speak to the other party.

### *To answer a call,*

Pick up the handset. The blinking status light next to the line key turns on steadily.

### *To hang up,*

Hang up the handset.

## Speakerphone

The Optiset E Standard and Advance Plus telephones have a two-way speakerphone, consisting of a speaker and a microphone. You can use either the handset or the speakerphone to make or receive calls. During a conversation, you can use your speakerphone instead of your handset by pressing the Speaker key and hanging up the handset. If you want to switch back to using your handset, pick it up.

### *To make a call,*

Press a line key or the Speaker key to get a dial tone, then dial.

### *To answer a call,*

Press the line key next to the blinking status light.

### *To hang up,*

Press the line key or the Speaker key.

### *To switch during a call,*

If you are using the handset and want to use the speakerphone, press the Speaker key and hang up the handset. If you are using the speakerphone and want to use the handset, pick up the handset.

# Station Speed Dialing

Station Speed Dialing lets you assign frequently used dialing sequences (extensions, outside numbers, or feature access codes) to each of ten single-digit codes (0 through 9). You can then dial a single-digit code instead of the entire sequence. You can be set up at the communications server for up to 30 codes, in groups of 10. If you are set up for more than ten, they follow a double-digit scheme (00 through 29).

## ***To set up a station speed code,***

1. When your phone is idle, press the Menu key.
2. Scroll to *Program/Service?* and select it.
3. Select *Change destinations?*.
4. Scroll to *Station speed dial?* and select it.  
*Enter index:* will be displayed, for the station speed dialing code.
5. Dial the code you want to use.  
*Enter new number:* will be displayed.
6. Dial the sequence you want the code to dial.
7. Select *Save?*.
8. Select *Exit?*.

OR

Press the Program key. Dial 13. Dial the code you want to use. Dial the sequence you want the code to dial. Select *Save?*. Select *Exit?*.



### ***To dial using a station speed code,***

1. When your phone is idle, press the Menu key.
2. Select *Speed dial features?*.
3. Scroll to *Station speed dial?* and select it.  
*ENTER INDEX:* will be displayed.
4. Dial the station speed dialing code.

OR

Press the Station Speed (SPEED) key, and dial the station speed code. Or get a dial tone, dial # 3, and then dial the station speed code.

# System Speed Dialing

If the System Speed Dialing feature is set up on your communications server, you can dial frequently called outside numbers (local, long distance, and international) by dialing a code number. Usually these codes are published for an entire company in a special system speed directory. Consult your system administrator if you do not know your system speed numbers. Your company may have up to sixteen system speed lists. For release 6.5 and above, you may have access to two of these lists or to the first ten lists plus one additional list. A number set up for a system speed code can contain an initial Personal Identification Number (PIN), if one is necessary to make outside calls.

## *To make a system speed call,*

1. Press the Menu key.
2. Select *Speed dial features?*.
3. Scroll to *System speed dial?* and select it. You may have two system speed dial lists.  
*ENTER INDEX:* will be displayed.
4. Dial the system speed dialing code.

OR

Press the correct System Speed key (SYS-SP1 for the first System Speed list or SYS-SP2 for the second). Or, get a dial tone and dial # 6 1 for the first list or # 6 2 for the second.

Then dial the system speed code.

# Transfer

Transfer lets you move a call to another extension or to an outside number if your communications server is set up to do this.

## ***To transfer a call,***

1. During a call, select *Start transfer?*
2. Dial the extension, or dial 9 and the outside number. If you want, announce the caller when the party answers.
3. Hang up.

OR

Press the Transfer (TRANSFR) key. Dial the extension, or dial 9 and the outside number. If you want, announce the caller when the party answers. Hang up.

## ***To reconnect,***

Before hanging up, scroll to *Release and return?* and select it. This rejoins you to the original call and releases the party you are talking to.

Or scroll to *Toggle/Connect?* and select it. This rejoins you to the original call. Selecting *Toggle/Connect* again returns you to the second party.

# Feature Access Codes

To use feature access codes      ➔ Get a dial tone, or press the Transfer key during a call. Dial the feature access code. You may need to press the Connect key to return to your call.

| <u>Feature</u>                  | <u>Access Code</u> |
|---------------------------------|--------------------|
| Account Number                  | * 2                |
| Bad Line Reporting              | * 5 6 3            |
| Busy Override                   | ## 7               |
| Buzz                            | # * 2              |
| Callback Request                | # 1                |
| Cancel                          | ## 1               |
| Class of Service                |                    |
| Restore Primary                 | * # 5 9 1          |
| Return to Secondary             | * # 5 9 0          |
| Com Group Speaker Call          | ** 6               |
| Conference                      |                    |
| Remove Last Party               | *** 4              |
| Remove Specific Party           | ** 4 1-8           |
| Direct Trunk Select             | ## 8               |
| Forwarding, Fixed               | # 9 0              |
| Cancel                          | ## 9 0             |
| Forwarding, Variable            |                    |
| All                             | # 9 1              |
| Busy                            | # 9 4              |
| Busy/Ring No Answer             | # 9 5              |
| External                        | # 9 2              |
| Internal                        | # 9 3              |
| Ring No Answer                  | # 9 6              |
| Cancel                          | ## 9 1             |
| Last Number Redial              | ## 4               |
| Mailbox Callback Message        |                    |
| Leave Message                   | # * 1              |
| Cancel                          | ** 8               |
| Turn Off Light                  | * 5 2              |
| Park                            | * 6                |
| Pickup                          |                    |
| Group                           | ** 3               |
| Station                         | * 3                |
| PIN Authorization               | * # 5 7            |
| Cancel                          | * # 5 8            |
| Privacy                         | # 2                |
| Cancel                          | ## 2               |
| Saved Number Redial             | # 4                |
| Speaker Call, Fixed             | ** 4               |
| Speaker Call, One-Way           | # 8 1              |
| Speaker Call, One-Way Broadcast | # 8 0              |
| Station Hunt                    |                    |
| Prevent                         | # * 9 3            |
| Allow                           | # * 9 2            |
| Set Destination                 | # * 9 0            |
| Clear Destination               | # * 9 9            |
| Station Speed Dialing           |                    |
| Call                            | # 3                |
| System Hold                     | * 8 0-9            |
| System Speed-1                  | # 6 1              |
| System Speed-2                  | # 6 2              |
| Trace Call                      | ### 1              |
| Universal Night Answer          | * # 3              |